

Introduction

Your **Sky Navigator** gives you the functionality of both a **Sky remote control** and a keyboard. When the front of the **Sky Navigator** is closed, it will operate as a **Sky remote control**, and when open it will operate as a keyboard.


Your **Sky Navigator** is compatible with all **Sky** digital satellite receivers, including **Sky+**. To ensure that your **Sky Navigator** is correctly set up to work with your equipment, it is very important that you observe the following instructions. You will need to change the factory setting in order to enable your **Sky Navigator** to operate your **Sky+**.

A Getting started

The batteries are already fitted inside your **Sky Navigator**. To connect them ready for operation, remove the tape from the battery pack by gently pulling on the tab and withdrawing it from the unit as shown below.

Next check that the batteries are connected. Press any button on the unit and check that the red LED at the end of the unit flashes.

Your **Sky Navigator** is now ready to operate your **Sky** digibox. If you have a **Sky+** please follow the instructions in section B.

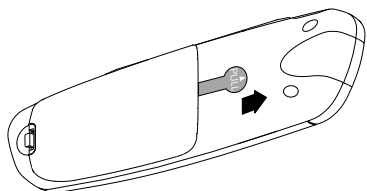

B Set up for owners of Sky+



Only follow these instructions if you are using your **Sky Navigator** with **Sky+**.

1. Press "tv" button on the **Sky Navigator**
2. Press and hold down "Select" and the yellow button together for about 2 seconds, until the red LED on the **Sky Navigator** flashes twice.
3. Press "1"
4. Press "select", the LED on the **Sky Navigator** will flash twice.

To reset your **Sky Navigator** to operate a **Sky** digibox carry out steps 1 and 2 and in step 3 press "0"


C Setting up your Sky Navigator to operate your TV


Your **Sky Navigator** will also operate your TV. To set up for your brand of TV please follow these steps:

1. Find your TV manufacturer listed in section I, e.g Philips is 0081. Write down your TV code here [][][][]. If your TV is not listed, press "interactive" and select "Sky Customer Service" for further assistance.
2. Turn on your TV.
3. Ensure that the front of your **Sky Navigator** is closed.
4. Press "tv".
5. Hold down "select" and the red button together for about two seconds, until the red LED on the **Sky Navigator** flashes twice.
6. Press "tv" again.
7. Key in the four digit code for your brand of TV. The LED on the **Sky Navigator** will flash twice. If the LED illuminates only once, re-check the code for your brand of TV and start again at step 4.
8. Press the standby button  on your **Sky Navigator**. If your TV switches off, press "select". The LED on the **Sky Navigator** will flash twice. If your TV does not switch off, press "tv", then press the standby button. Repeat this (press "tv", then standby ) until your TV turns off, then press "select".

If you are still experiencing problems, please telephone for technical assistance. you will find the "Technical Help" telephone number by pressing "services" and selecting "Telephone Numbers".

D Key operation in Sky remote control mode

 sets your remote to operate your **Sky** digibox or **Sky+**



tv
sets your **Sky Navigator** to operate your TV

box office
shows the Box Office screen

tv guide
shows the TV Guide screen

mute
turns your TV's sound off and on

vol+ and -
changes your TV's volume

arrows
move the highlight around the screen to select the option you want


text
switches to text mode

***play / pause**
plays or pauses the programme

***rewind**
rewinds the programme

***R**
records the programme

colour keys
select the corresponding colour options shown on-screen

standby 
turns your set top box (or TV) on and off

services
shows the Services screen

interactive
shows the interactive screen

i
shows information about the programme you have highlighted

ch+ and -
changes the channel

select
selects the option you have highlighted or confirms your choice

back up
shows the previous screen

help
shows help on using Sky Guide


fast forward*
fast forwards the programme

stop*
stops playback of the programme

number keys
select channel numbers or on-screen options

* These functions are only applicable to **Sky+**.

E Key operation in Sky keyboard mode

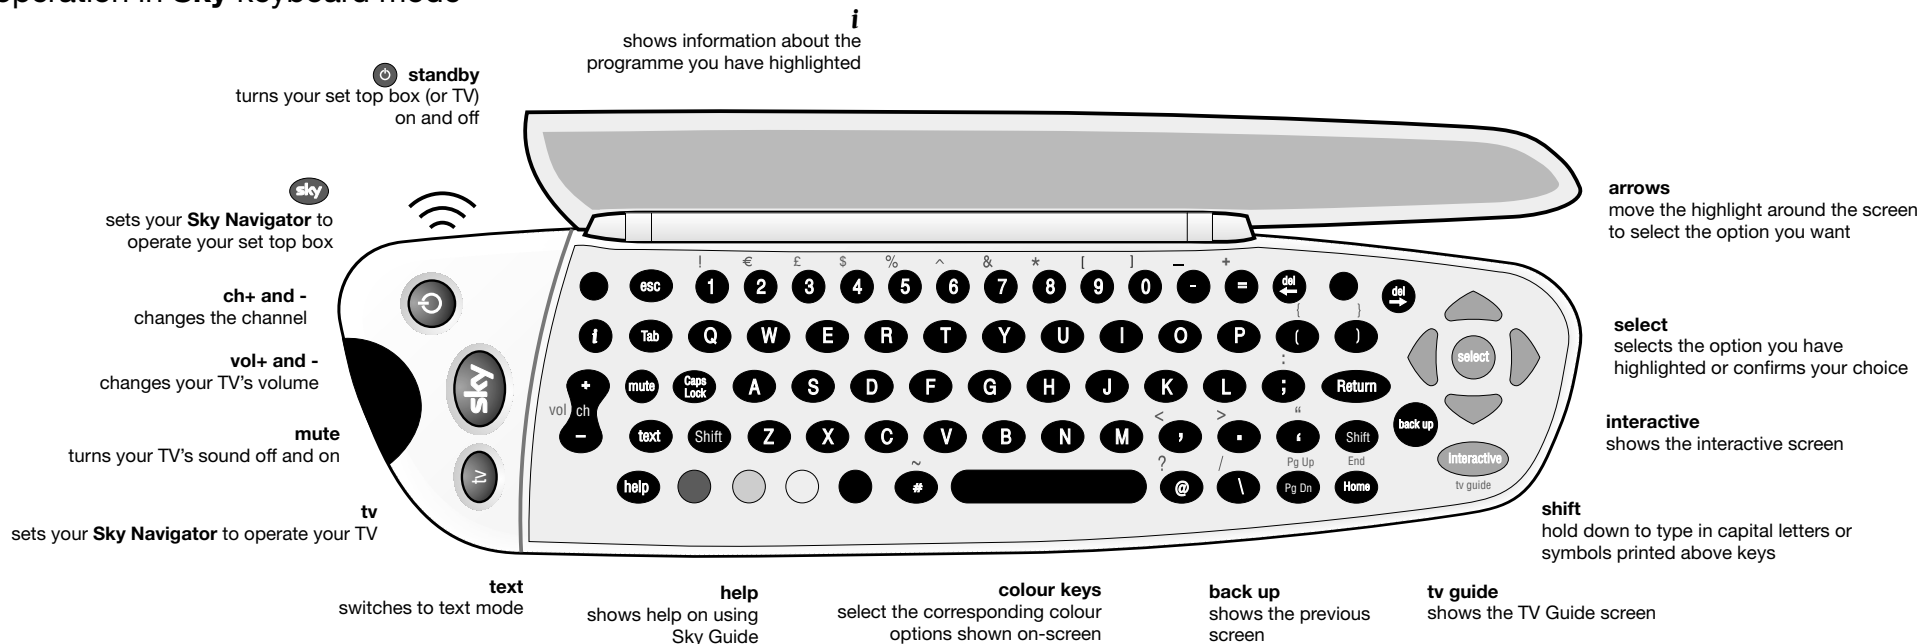


F Changing batteries

Open the battery compartment by pushing back the clip then lifting off the cover.

Replace with four AAA (MN2400, LR23, UM4) batteries.

Do not mix different battery types, i.e. Alkaline and Manganese.

Do not mix old and new batteries.

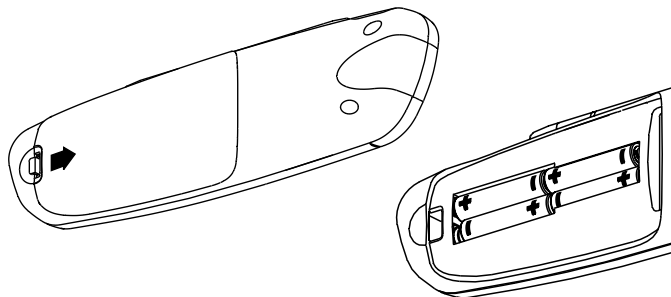

G General use

If the batteries are removed for more than 10 minutes, the remote will need to be reprogrammed as described in sections B and C.

If you see an on screen message that informs you the **Sky Navigator** batteries are low, please change them as soon as possible.

H Care

Do not drop

Do not immerse in liquids.

Clean only with a dry cloth.

Do not leave flat batteries in the unit.

As this product operates using infra-red, ensure there is a clear line of sight between your **Sky Navigator** and equipment you are operating.

I TV set up codes

Aiwa	0406	Memorex	0037
Akai	0098	Metz	0491
Akura	0042	Minoka	0921
Alba	0043	Mitsubishi	0150
Amstrad	0063	NEI	0514
BPL	0115	Nikkai	0528
Baird	0117	Nokia	0536
Bang & Olufsen	0118	Nordmende	0537
Beko	0125	Orion	0549
Beon	0899	Panasonic	0051
Brionvega	0147	Philips	0081
Bush	0157	Pioneer	0166
Crown	0225	Protech	0595
Daewoo	0092	Pye	0600
Decca	0244	Roadstar	0625
Dual	0257	Saba	0645
Ferguson	0293	Saisho	0649
Fidelity	0294	Salora	0651
Finlandia	0296	Samsung	0060
Finlux	0297	Sanyo	0159
Fisher	0154	Schneider	0665
Funai	0179	Seleco	0672
Genexxa	0330	Sharp	0093
Goldstar	0056	Siemens	0680
Goodmans	0335	Sony	0000
Granada	0340	Soundwave	0702
Grundig	0345	Tandy	0741
Harwood	0361	Tatung	0049
Hinari	0365	Technics	0250
Hitachi	0145	Telefunken	0757
ITT	0384	Thomson	0771
JVC	0053	Thorn	0772
Loewe	0442	Thorn-Ferguson	0936
Matsui	0477	Toshiba	0156